



LEGEND	
---	Factory Low Voltage Wiring
---	Factory Line Voltage Wiring
---	Field Low Voltage Wiring
---	Field Line Voltage Wiring
---	Printed Circuit Trace
---	Optional Wiring
---	Optional Block
---	Capacitor
---	Circuit Breaker
---	Condensate Pan
---	Ground
---	High Pressure Switch
---	LED
---	Low Pressure Switch
---	Mate-N-Lock
---	Multi Splice Connector
---	Optional
---	OVERLOAD
---	Relay contacts - N.C.
---	Relay contacts - N.O.
---	Relay / Contactor Coil
---	Solenoid Coil
---	Splice Cap
---	Temperature Switch
---	Thermistor
---	Wire Nut

AL	Alarm Relay Contacts
BM	Blower Motor
BMC	Blower Motor Capacitor
BR	Blower Relay
CAP	Capacitor
CB	Circuit Breaker
CC	Compressor - Contactor
CO	Compressor Relay
CR	Condensate Overflow Sensor
CTB	Common Terminal Block
CS	Current Sensor
DHW	Domestic Hot Water
DM	Damper Motor
DTS	Discharge Temperature Switch
ES	End Switch
EWTS	Entering Water Temp Sensor
FPI	Sensor, low temp protection, water coil
FP2	Sensor, low temp protection, air coil
FSS	Fan Speed Switch
HP	High Pressure Switch
HPWS	High Pressure Water Switch
HR	Heating Relay
JW	Jumper Wire
JW1	Leaving Air Temperature
JW2	Loss of Change Pressure Switch
JW3	Lock Out Relay
JW4	Leaving Water Temp Sensor
JW5	Modulating Water Valve
LOC	Lock Out Relay
LOR	Lock Out Relay
LWT	Leaving Water Temp Sensor
LWTS	Modulating Water Valve
MOD	Modulating Water Valve
MS	Manual Starter
MSC	Multi Splice Connector
MWV	Motorized Water Valve
MWV	Motorized Water Valve
PB	Power Terminal Block
PDB	Power Distribution Block
POT	Potentiometer
P1	Field Wiring Terminal Block
PAS	Return Air Sensor
RAS	Reversing Valve Solenoid
RVS	Start Assist Capacitor
SAC	Start Assist Capacitor
TB	Terminal Block
TRANS	Transformer
TS	Terminal Strip
UMT	Unit Mounted Thermostat

- NOTES:
- Compressor and Blower Motor thermally protected internally.
  - All wiring to the unit must comply with NEC and local codes. Low voltage wiring shall be Class 2 or equivalent.
  - Transformer wiring is voltage sensitive. Use the layout corresponding to the unit voltage. For 208/230 volt units, the factory default is 208V. For 308/420V operation the factory default is 380V.
  - FPI provides low temperature protection for WATER. When using ANTI-FREEZE solutions, cut JW3 jumper.
  - Typical heat pump thermostat wiring shown. Refer to thermostat IOM for wiring to the unit. T-Stat wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.

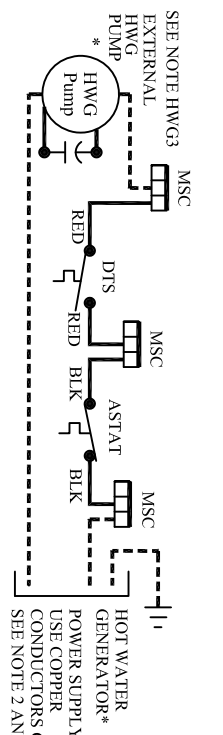

- 24V Alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW1 for CXM/DXM Gen2 or JW4 DXM.
- Transformer Secondary Ground via CXM/DXM board standoffs and screws to Control Box.
- Blower motor is factory wired for high & low speeds. No other combination is available.
- Blower motor is factor wired for medium & high speeds. For any other combination of speeds, at the motor attach the black wire to the higher of the two desired speed taps, and the blue wire to the lower of the two desired speed taps.
- AQUA STAT is supplied with unit and must be wired in series with the hot leg to the pump. Aqua stat is rated for voltage up to 277V.
- Factory cut JW1 (CXM) or JW4 (DXM) jumper. Dry Contact will be available between AL1 and AL2.
- MPC1. Refer to MPC Installation application, and Operation Manual For Control Wiring to the unit.

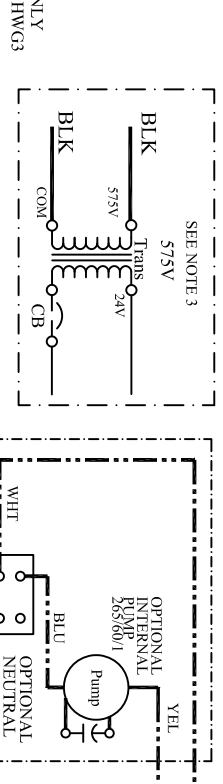

- MPC3. ASW sensors are not required on Water-Water application. ASW06-ASW08 (Water-Air Only) move jumper to LSTAT, ASW13-ASW15 move jumper to Rnet.
- MWV1. Wire from "Y1" on TSTAT/MPC/LON to "Y" on control board when MWV is not used.

