

LEGEND

- Factory Low voltage Wiring
- Factory Line Voltage Wiring
- - - Field Low voltage Wiring
- - - Field Line voltage Wiring
- - - Printed Circuit Trace
- - - Optional Wiring
- ⊖ Optional Block Capacitor
- ⊖ Circuit Breaker
- ⊖ Condensate Pan
- ⊖ Ground
- ⊖ High Pressure Switch
- ⊖ LED
- ⊖ Low Pressure Switch
- ⊖ Mate-N-Lock
- ⊖ Multi Splice Connector
- * Optional
- ⊖ OVERLOAD
- ⊖ Relay contacts - N.C.
- ⊖ Relay contacts - N.O.
- ⊖ Relay / Contactor Coil
- ⊖ Solenoid Coil
- ⊖ Splice Cap
- ⊖ Temperature Switch
- ⊖ Thermistor
- ⊖ Wire Nut

NOTES:

1. Compressor and Blower Motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes low voltage wiring shall be Class 2 or equivalent.
3. Transformer is wired to 265 V (BRN) lead for 265/60/1 units, 230V (ORG) Lead for 220-240/50/1, or 208V (RED) lead for 208/60/1. For 230/60/1 switch RED & ORG leads at L1 and insulate RED lead.
4. FP1 provides low temperature protection for WATER. When using ANTI-FREEZE solutions, cut JW3 jumper.
5. Typical heat pump thermostat wiring shown. Refer to thermostat IOM for wiring to the unit. T-Stat wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.
6. 24V Alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW1 for CXM/DXM Gen2 or JW4 DXM.

7. Transformer Secondary Ground via CXM/DXM board standoffs and screws to Control Box.


BM1. Fan motors factory wired for Medium Speed. For High or Low speed remove BLU wire from fan motor speed tap 'M' and connect to 'H' for High or 'L' for Low.

LON1. Refer to LON, OR TSTAT Installation, Application, and Operation Manual for control wiring to the unit.






LON2. Optional LON wires. Only connect if LON connection is desired at the wall sensor.

SAC2. Use start assist capacitor only on unit size 006-018. For residential units 015-018, SAC may need to be strapped to capacitor.






- AL Alarm Relay Contacts
- BM Blower Motor
- BMC Blower Motor Capacitor
- BR Blower Relay
- CAP Capacitor
- CB Circuit Breaker
- CC Compressor Contractor
- CO Condensate Overflow Sensor
- CR Compressor Relay
- CTB Common Terminal Block
- CS Current Sensor
- DHW Domestic Hot Water
- DM Damper Motor
- DTS Discharge Temperature Switch
- ES End Switch
- EWTS Entering Water Temp Sensor
- FP1 Sensor, low temp protection, water coil
- FP2 Sensor, low temp protection, air coil
- FSS Fan Speed Switch
- HP High Pressure Switch
- HPWS High Pressure Water Switch
- HR Heating Relay
- JW Jumper Wire
- LAT Leaving Air Temperature
- LOC Loss of Charge Pressure Switch
- LOR Lock Out Relay
- LWTS Leaving Water Temp Sensor
- MOD Modulating Water Valve
- MS Manual Starter
- MSC Multi Splice Connector
- MWV Motorized Water Valve
- PB Power Terminal Block
- PDB Power Distribution Block
- POT Potentiometer
- P1 Field Wiring Terminal Block
- RAS Return Air Sensor
- RVS Reversing Valve Solenoid
- SAC Start Assist Capacitor
- TB Terminal Block
- TRANS Transformer
- TS Terminal Strip
- UMT Unit Mounted Thermostat

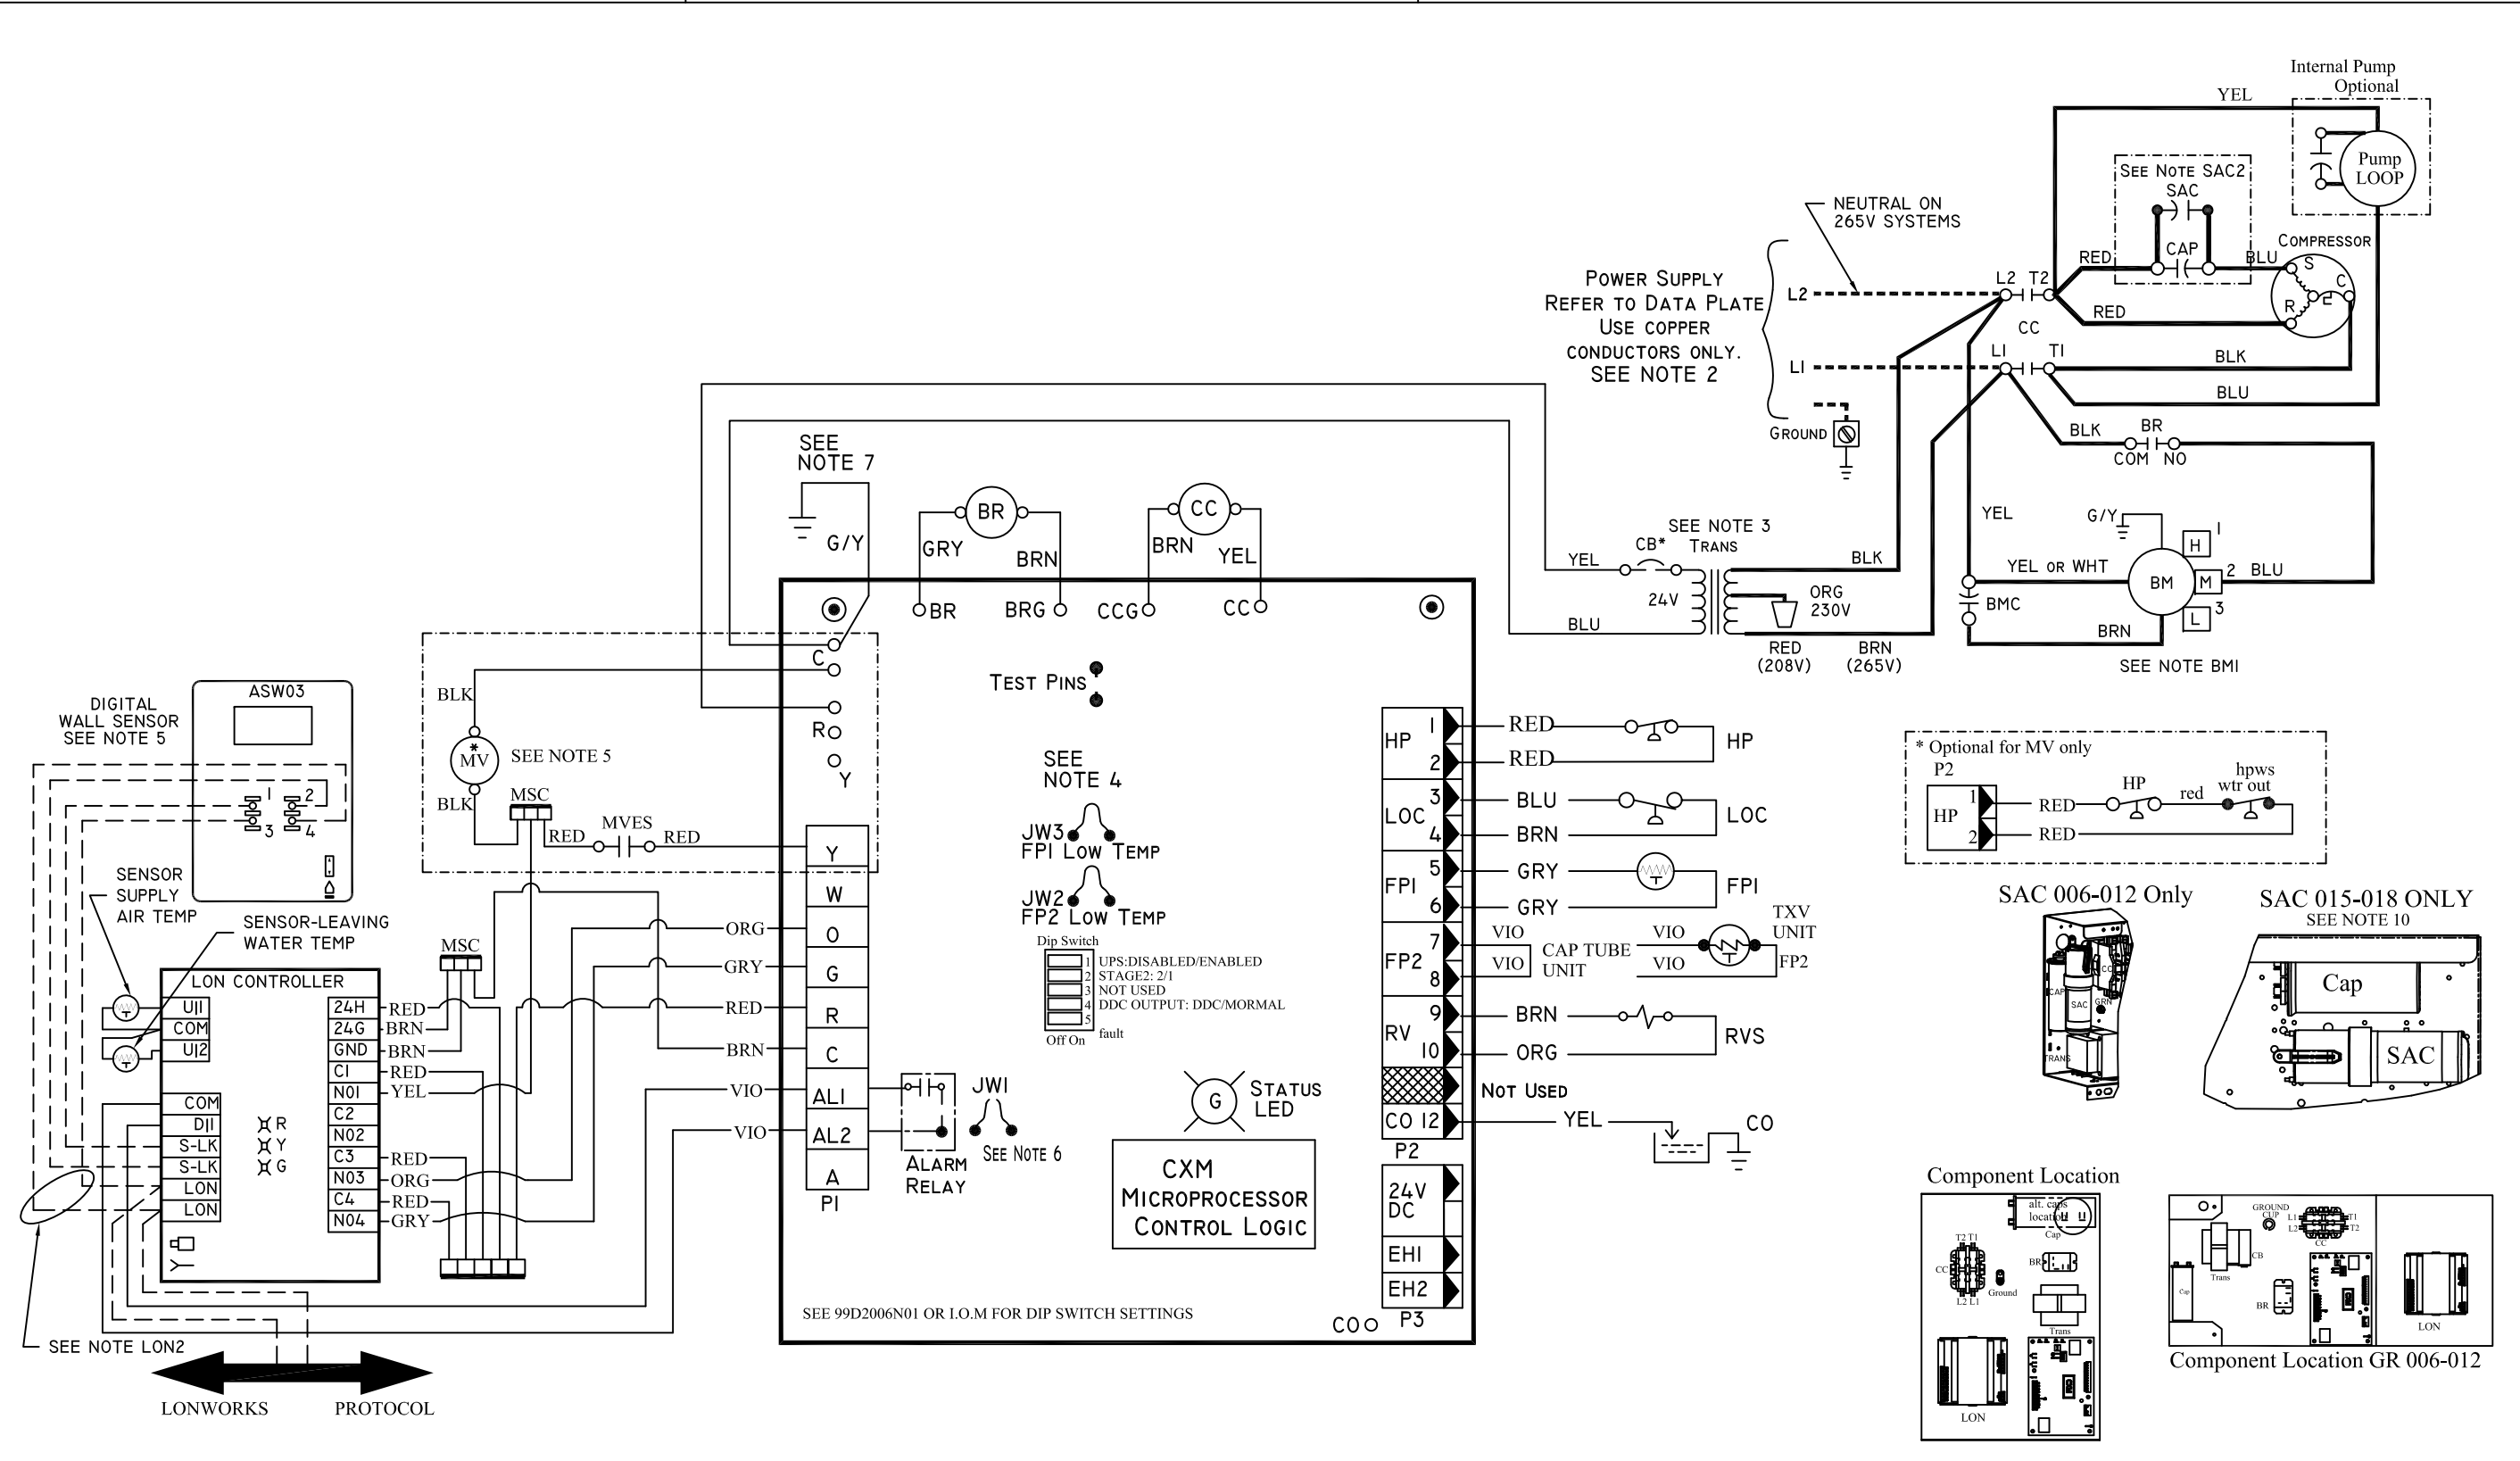


LONWORKS PROTOCOL

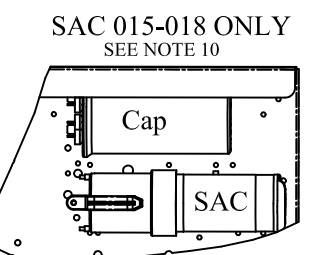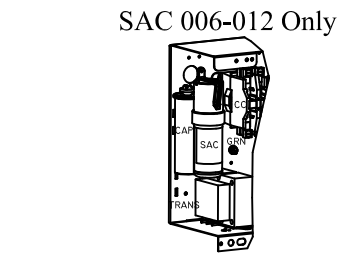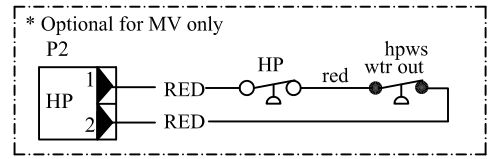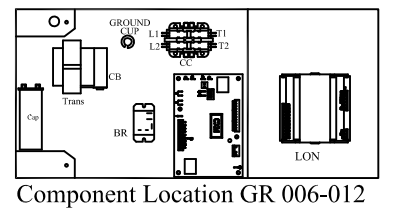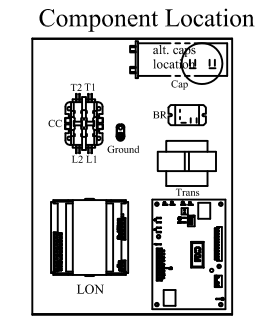

SEE 99D2006N01 OR I.O.M FOR DIP SWITCH SETTINGS

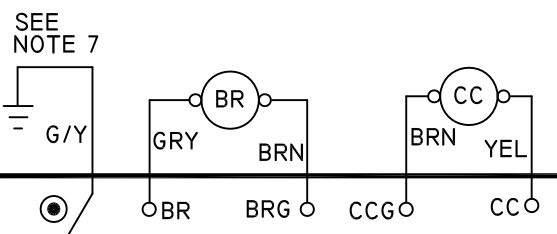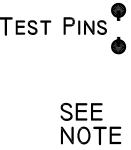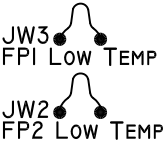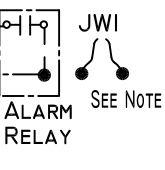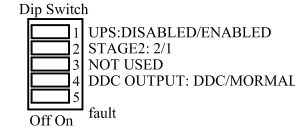

POWER SUPPLY
REFER TO DATA PLATE
USE COPPER
CONDUCTORS ONLY.
SEE NOTE 2

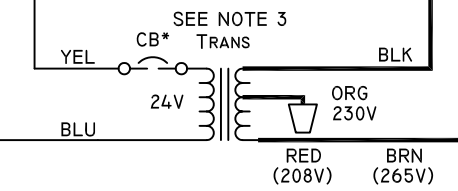

NEUTRAL ON
265V SYSTEMS

SEE NOTE BM1

SAC 006-012 Only

SAC 015-018 ONLY
SEE NOTE 10

Component Location

Component Location GR 006-012