





### LON OPTION


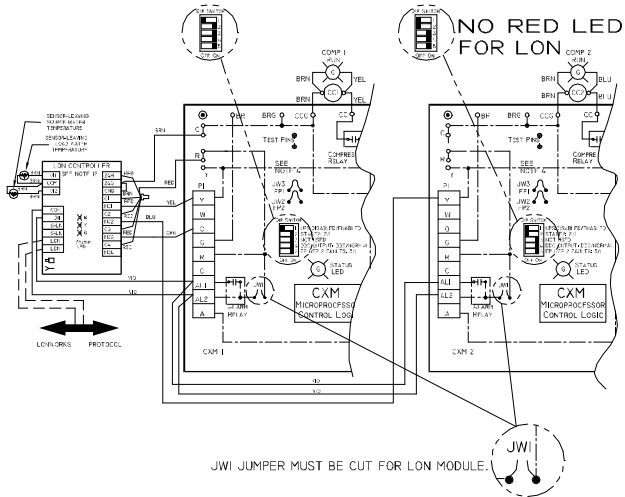


REFER TO LONWORKS INSTALLATION, APPLICATION, AND OPERATION MANUAL FOR CONTROL WIRING TO THE UNIT. LOW VOLTAGE WIRING MUST BE "CLASS 1" AND VOLTAGE RATED EQUAL OR GREATER THAN UNIT SUPPLY VOLTAGE.

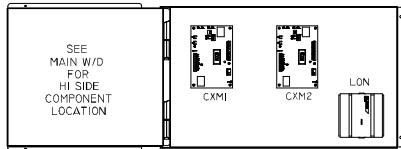

CONTROL BOX LAYOUT LOW SIDE

### LON OPTION

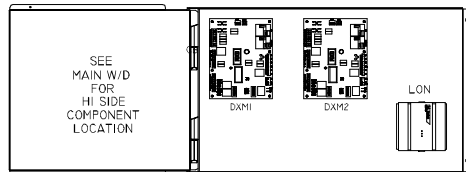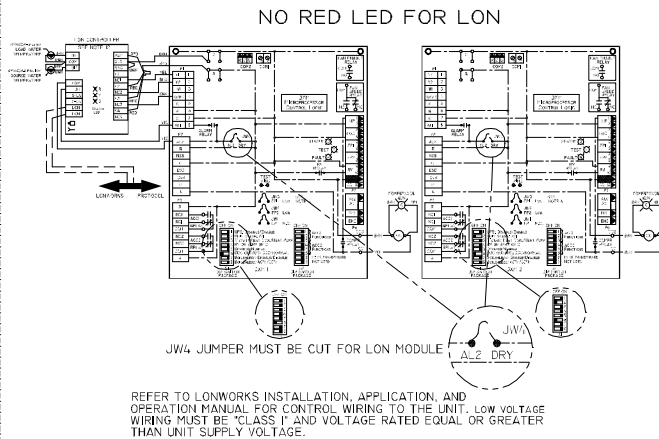

CONTROL BOX LAYOUT LOW SIDE