



decentralized air conditioning systems

# Installation Instructions Room Cabinet ELEC. HEAT

## 700 SERIES — MODELS 7 THRU 17 ROOM CABINET INSTALLATION

The room cabinet is shipped fully assembled and ready for installation; no disassembly and reassembly is required. The cabinet should be installed only after the interior walls and the floors have been finished.

**Step 1.** Position room cabinet over top wall box mounting flange and set the two slots in the cabinet mounting angle on the threaded studs in the mounting flange. Push cabinet hard against wall and tighten 2 wing nuts over the threaded studs to fasten cabinet and heating module securely to the wall box mounting flange.

**Step 2.** Loosen 4 wing nuts and adjust cabinet legs until they sit squarely on finished floor, then retighten the wing nuts.

**Step 3.** Lag cabinet to wall at slotted mounting holes in rear cabinet flanges.

**Step 4.** If cooling chassis is not to be installed immediately, decorator panel may be added to close front of room cabinet at this time. Set lower mounting tabs of panel onto pins at bottom of the cabinet side panels. Swing decorator panel to vertical and then lower it until upper mounting tabs slip into flanges on front of cabinet. Press firmly downward on panel to secure it in place.

**NOTE:** To remove panel, simply pull upward firmly to free tabs, then swing panel away from cabinet.

