


- LEGEND**
- Factory Low voltage Wiring
  - Factory Line Voltage Wiring
  - - - Field Low voltage Wiring
  - - - Field Line voltage Wiring
  - Printed Circuit Trace
  - - - Optional Wiring
  - Optional Block
  - Capacitor
  - Circuit Breaker
  - Condensate Pan
  - Ground
  - High Pressure Switch
  - LED
  - Low Pressure Switch
  - Mate-N-Lock
  - Multi Splice Connector
  - \* Optional
  - OVERLOAD
  - Relay contacts - N.C.
  - Relay contacts - N.O.
  - Relay / Contactor Coil
  - Solenoid Coil
  - Splice Cap
  - Temperature Switch
  - Thermistor
  - Wire Nut

- NOTES:**
1. Compressor and Blower Motor thermally protected internally.
  2. All wiring to the unit must comply with NEC and local codes low voltage wiring shall be Class 2 or equivalent.
  3. Transformer wiring is voltage sensitive. Use the layout corresponding to the unit voltage. For 208/230 volt units, the factory default is 208V. For 380/420V operation the factory default is 380V.
  4. FP1 provides low temperature protection for WATER. When using ANTI-FREEZE solutions, cut JW3 jumper.
  5. Typical heat pump thermostat wiring shown. Refer to thermostat IOM for wiring to the unit. T-Stat wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.
  6. 24V Alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW4 for CXM/DXM Gen2 or JW4 DXM.
  7. Transformer Secondary Ground via CXM/DXM board standoffs and screws to Control Box.

- BM5. For dual point power option, (QTY.3X) blower wires will go to PDB2 only.  
 MWV5. Use a screwdriver to set the timer to one mark before "1" (.9) on the Motorized Valve.

- AL Alarm Relay Contacts
- BM Blower Motor
- BMC Blower Motor Capacitor
- BR Blower Relay
- CAP Capacitor
- CB Circuit Breaker
- CC Compressor Contactor
- CO Condensate Overflow Sensor
- CR Compressor Relay
- CTB Common Terminal Block
- CS Current Sensor
- DHW Domestic Hot Water
- DM Damper Motor
- DTS Discharge Temperature Switch
- ES End Switch
- EWTS Entering Water Temp Sensor
- FP1 Sensor, low temp protection, water coil
- FP2 Sensor, low temp protection, air coil
- FSS Fan Speed Switch
- HP High Pressure Switch
- HPWS High Pressure Water Switch
- HR Heating Relay
- IAP IONIZATION AIR PURIFIER
- JW Jumper Wire
- LAT Leaving Air Temperature
- LOC Loss of Charge Pressure Switch
- LOR Lock Out Relay
- LWTS Leaving Water Temp Sensor
- MOD Modulating Water Valve
- MS Manual Starter
- MSC Multi Splice Connector
- MWV Motorized Water Valve
- PB Power Terminal Block
- PDB Power Distribution Block
- POT Potentiometer
- P1 Field Wiring Terminal Block
- RAS Return Air Sensor
- RVS Reversing Valve Solenoid
- SAC Start Assist Capacitor
- TB Terminal Block
- TRANS Transformer
- TS Terminal Strip
- UMT Unit Mounted Thermostat

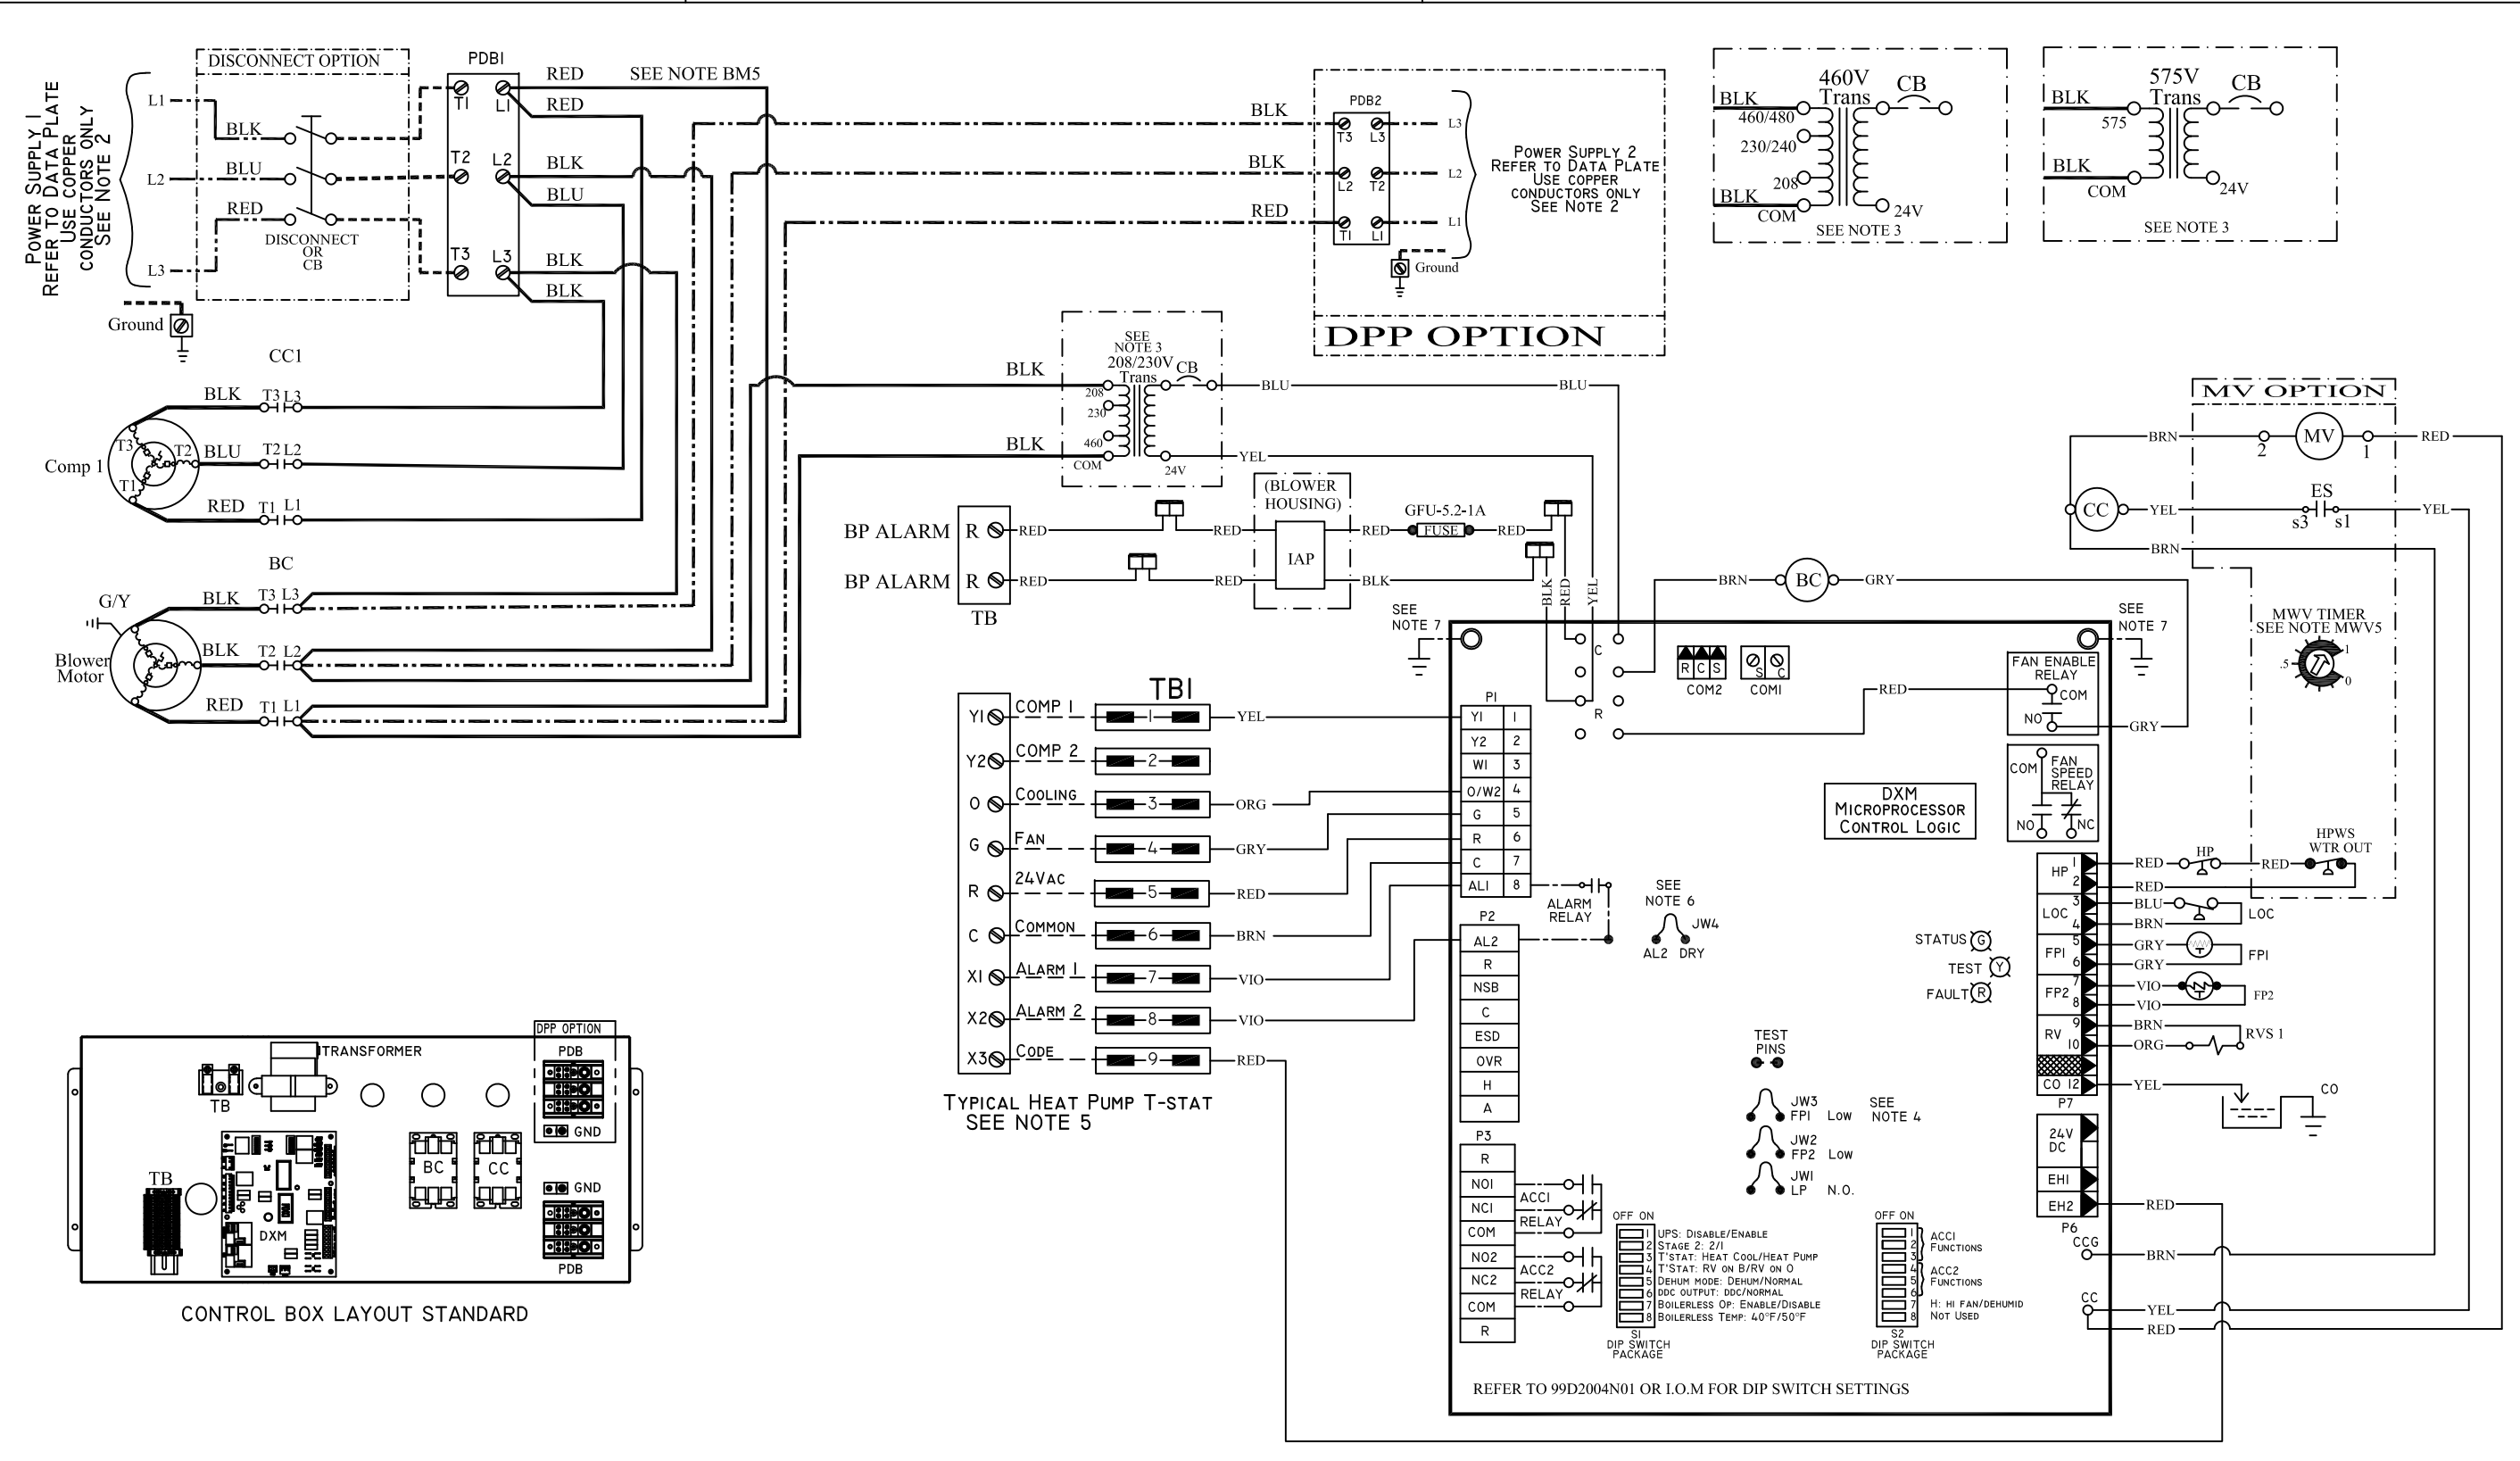

CONTROL BOX LAYOUT STANDARD

TYPICAL HEAT PUMP T-STAT SEE NOTE 5

REFER TO 99D2004N01 OR I.O.M FOR DIP SWITCH SETTINGS