



iGate™ Connect Thermostat User Manual

CONTENTS

APPROVALS	1
FCC COMPLIANCE STATEMENT	1
GETTING STARTED	5
iGATE™ CONNECT THERMOSTAT BASICS	6
What's on the Home Screen?	6
Using the Navigation Buttons	8
Idle Screen	9
About Your iGate™ Connect Thermostat	10
CONNECTING TO THE INTERNET	10
Setting Up WiFi and Obtaining a Registration Code	11
Configuring a Web Portal Account	12
Re-registering the iGate™ Connect Thermostat	14
USING YOUR iGATE™ CONNECT THERMOSTAT	15
System Mode	16
Hot Water Mode (If Applicable)	16
Fan	17
Weather Forecast	19
Resetting the Thermostat	19
Rebooting the iGate™ Connect Thermostat	20

Cleaning the iGate™ Connect Thermostat	20
What To Do If You Move	21
CONFIGURING YOUR iGATE™ CONNECT THERMOSTAT	21
Configuring Personal Preferences	22
Utility CPP Setting	26
Set Up Reminders and Alerts	28
Configure Alerts	29
WiFi	30
Creating Your Weekly Schedule	31
Using the Weekly Schedule Editor	33
Scheduling a Vacation	34
UNDERSTANDING ALERTS	36
List of Alerts	37

Approvals

This product was designed and built in accordance to RoHS directive 2002/95/EC and contains no hazardous substances as defined by this directive.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Change or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.

Industry Canada (IC)

Compliance Notice

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

RF Exposure Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

Homologations

Ce produit a été conçu et fabriqué conformément à la directive européenne RoHS 2002/95/EC, et ne contient aucune substance dangereuse selon la définition de cette directive.

Commission fédérale des communications (FCC)

Avis de conformité :

Le matériel a été testé et jugé conforme aux limitations de la catégorie B des appareils numériques, en vertu de l'article 15 des règles de la FCC. Ces critères sont établis afin d'assurer une protection suffisante contre les interférences nocives à l'intérieur d'une résidence. Cet appareil produit, utilise et peut émettre de l'énergie radioélectrique et peut occasionner des interférences nuisibles aux communications radio s'il n'est pas assemblé et utilisé selon les directives. Toutefois, il est impossible de garantir qu'aucune interférence ne se produira dans une installation donnée. Si ce matériel cause des interférences nuisibles à la réception radio ou télévisuelle, ce qui peut être établi en éteignant et en rallumant le matériel, nous recommandons à l'utilisateur d'essayer de remédier à cette interférence de l'une ou de plusieurs des façons suivantes :

- Réorientez ou déplacez l'antenne réceptrice.
- Augmentez la distance séparant l'appareil et le récepteur.
- Branchez l'appareil à un circuit différent de celui où est __ branché le récepteur.
- Consultez le marchand ou un technicien expérimenté en radio et télévision pour obtenir de l'aide.

Cet appareil est conforme en vertu de l'article 15 des règles de la FCC. L'exploitation est autorisée aux deux conditions suivantes :

- 1 L'appareil ne doit pas produire de brouillage.
- 2 L'utilisateur de l'appareil doit accepter tout brouillage __

radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Toute modification apportée à votre appareil qui n'est pas expressément approuvée par le fabricant pourrait annuler le droit d'usage du matériel par l'utilisateur.

Informations relatives à l'exposition aux fréquences radio

Cet équipement est conforme aux limites d'exposition aux fréquences radio de la FCC définies pour un environnement non contrôlé. Afin d'éviter de dépasser les limites d'exposition aux fréquences radio établies par la FCC, il est recommandé de maintenir une distance minimale de 20 cm entre le corps et l'antenne lors d'une utilisation normale.

Industrie Canada (IC)

Avis de conformité :

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage _____ radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Énoncé sur l'exposition aux fréquences radio :


Cet équipement est conforme aux limites d'exposition aux fréquences radio d'IC RSS-102 définies pour un environnement non contrôlé. Cet émetteur doit être installé à au moins 20 cm de toute personne et ne doit pas être colocalisé ou fonctionner en association avec une autre antenne ou émetteur.

MODEL: AWC99B51
FCC ID: WR9EBSTATSI01
IC: 7981A-EBSTATSI01

GETTING STARTED

Welcome

ClimateMaster helps homeowners conserve energy, save money and reduce their environmental impact. Our products automate energy conservation, making it comfortable when you are home and saving money when you are not.

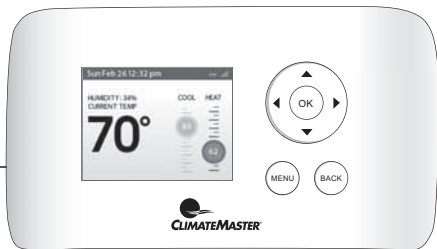

Key features of the iGate™ Connect thermostat:

- Color display
- Precision +/- 1°F (0.5°C) temperature control
- Remote access via the Internet, tablet or smartphone
- Vacation programming
- Seven-day programming
- Humidity sensing
- Intelligent algorithms that adapt to your home and preferences
- Fan control
- Hot Water Control (if applicable) 8


iGate™ Connect thermostat

iGATE™ CONNECT THERMOSTAT BASICS

The iGate™ Connect thermostat has an easy-to-read color screen that displays all the information you need to set and manage your iGate™ Connect thermostat. Use the navigation buttons on the right to quickly change the temperature, access features, and configure your settings.

What's on the Home Screen?

Whenever you press a button, the Home screen is displayed.

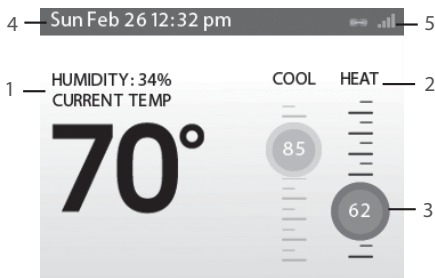

Home screen

1. Current Temperature and Humidity

The current (actual) temperature and humidity in the room where the iGate™ Connect thermostat is installed. You can set the iGate™ Connect thermostat to display Celsius or Fahrenheit. See Temperature Display on page 25.

2. System Mode

The current method of temperature control: heat, cool, or auto. See System Mode on page 19.

3. Current Set Point

The temperature at which the system is programmed to maintain at a particular point in time.

Press ▲(up) or ▼(down) to adjust it manually by increments of 1°F (0.5°C). If the system is set to Auto, press ◀(left) or ▶(right) to switch between heat and cool set points.

When you manually adjust the set temperature, you put the system into a Hold mode. See Hold Action on page 26. To return back to the pre-programmed temperature, press **OK**.

For maximum savings you should program your iGate™ Connect thermostat to control the temperature automatically. See Creating Your Weekly Schedule on page 34.

4. Current Time/Date

Displays the current date and time for your time zone.

5. Internet Access

Indicates that the iGate™ Connect thermostat is connected to the Internet. The more bars, the stronger the signal. A chain link indicates communication with the ClimateMaster web servers.

Using the Navigation Buttons

The navigation buttons located on the right of the iGate™ Connect thermostat let you select options and control the iGate™ Connect thermostat.



- **▲ (up)** On the Home screen, press ▲ to increase the temperature set point by 1°F (0.5°C). For menus, press ▲ to move up.
- **▼ (down)** On the Home screen, press ▼ to decrease the temperature set point by 1°F (0.5°C). For menus, press ▼ to move down.
- **◀ (left)** On the Home screen, if Auto mode is enabled, press ◀ to switch between heat and cool set points. For menus, press ◀ to go back to the previous screen.
- **▶ (right)** On the Home screen, if Auto mode is enabled, press ▶ to switch between heat and cool set points. For menus, press ▶ to choose the currently highlighted option.
- **OK** On a menu screen, press **OK** to choose the currently highlighted option. If a configuration option is selected, pressing **OK** will keep its new value and return back to the previous screen.
- **MENU** Pressing **MENU** displays a list of all available options. If a menu is currently displayed, pressing **MENU** will cancel any unsaved changes and return to the Home screen.
- **BACK** On a menu screen, press **BACK** to go back to the previous screen.



On-Screen Keyboard


If you need to type in any information, an on-screen keyboard will appear. To enter a letter or number, move to the character by pressing the arrow keys and then press **OK** to select it.

Select **Caps** to enter capital letters; select **&@#** to enter commonly used symbols. If you make a mistake, press **X** to delete the text .

To keep your changes, select **Save**. To cancel your changes, press the **BACK** button.

Idle Screen

When you are not actively using your iGate™ Connect thermostat, the screen will dim and display the idle screen.

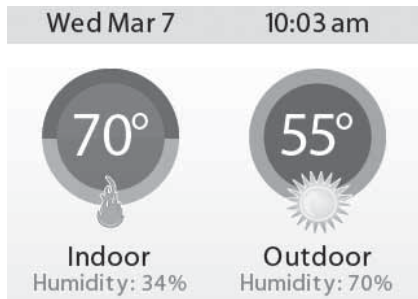

Idle screen

The Idle screen can show the temperature, time and date, humidity, weather conditions, and operating mode (red for heat, blue for cool). Snowflake and flame icons indicate if cooling or heating is currently engaged.

Note that you need to connect your iGate™ Connect thermostat to the Internet for the outdoor temperature, outdoor humidity, and weather indicators to function.

To customize the content of the idle screen:

From the Home screen, press **MENU**.

Select **Settings** ► **Preferences** ► **Idle Screen**

From here you can enable/disable the idle screen, the temperature bubbles, and date/time display.

About Your iGate™ Connect Thermostat

To view information about your iGate™ Connect thermostat:

From the Home screen, press **MENU**.

Select **About**.

The **About** menu displays useful information about your iGate™ Connect thermostat, its serial number, and optional information about the contractor who installed it. You may need this information if you are having difficulties or need technical support.

The About page also displays information about your current WiFi configuration. You can use these settings to help troubleshoot Internet connectivity issues.

CONNECTING TO THE INTERNET

Connect your iGate™ Connect thermostat to the Internet so you can control it from your own personalized, secure ClimateMaster Web Portal, smartphone, or tablet.

From the Web Portal, you can:

- Program, configure and control your iGate™ Connect thermostat.
- Control your iGate™ Connect thermostat from anywhere you have Internet access (including smartphones and tablets).
- Use local weather data to maximize energy savings.
- Receive important alerts and reminders about your heating and cooling system.

Note: To connect your system to your personalized ClimateMaster Web Portal you must have a broadband Internet connection and a wireless 802.11 b/g/n (WiFi) home network.

Setting Up WiFi and Obtaining a Registration Code

The iGate™ Connect thermostat uses your home WiFi network to connect to the Internet. First, enable WiFi on the iGate™ Connect thermostat (see instructions to the right).

The iGate™ Connect thermostat will display a list of available networks, along with an indication of the signal strength (the more bars, the better) and whether encryption is used.

If your home network is not listed, or if the signal strength is very low, try adjusting the antenna on your wireless router. If that doesn't improve the signal, try moving your router closer to the iGate™ Connect thermostat.

Once your network has been detected, select it from the list. If the network is encrypted, you will be asked to enter a password for that network. This is the password you created when the wireless router was first set up.

After you provide the password, your iGate™ Connect thermostat will automatically connect to the Internet. A chain link on the screen indicates you have established a connection with the ClimateMaster web servers.

Write down the registration code as you will need it when configuring your Web Portal account. You can leave the code displayed on the screen while you continue with the next step.

Having Trouble?

If you are having trouble connecting to the Internet or finding your WiFi network, you may need to configure your network parameters manually. See WiFi on page 33.

To set up WiFi:

From the Home screen, press **MENU**.

Select **Register Thermostat**.

Select **Continue**.

Select **WiFi Settings**.

Select **WiFi Radio ▶ Enabled**.

Select your network from the list.

If prompted, enter your network password.

The iGate™ Connect thermostat will automatically connect to the Internet and display a registration code.

Write down the registration code; you will need it in the next step.

Configuring a Web Portal Account

After setting up WiFi on your iGate™ Connect thermostat and obtaining the registration code, you need to configure your Web Portal account.

1. From a web browser on a PC, visit www.ClimateMaster.com/residential/owners-area/igate-connect/


2. Click **REGISTER THERMOSTAT**.

3. Click **Create a new account**.

(If you already have a Web Portal, click **Register to an existing account**, enter your email address and password, and proceed to step 5).



4. Enter your email address and password. Click **Create Web Portal**.

The form is titled "Create your personal Web Portal". It contains three input fields: "Email Address", "Password", and "Re-Type Password". Below the fields are two buttons: "Cancel" and "Create Web Portal".

5. Enter the registration code displayed on the iGate™ Connect thermostat. Click **Register**.

Add your iGate™ Connect thermostat to your Web Portal

Select the 'Register Thermostat' menu on your thermostat to get your 4-digit registration code. Enter it here to link it to your Web Portal.



Note: If you forgot the registration code, select **Register Thermostat** again from the iGate™ Connect thermostat menu and obtain a new registration code.

6. Return back to your iGate™ Connect thermostat and select **Yes** to confirm your email address and complete the registration process. If you made a mistake with your email address, select **No** and repeat the registration process.

Complete registration of this thermostat with
your_email@emailaddress.com

Yes

No

Your iGate™ Connect thermostat is now registered. You can now monitor and control your iGate™ Connect thermostat from the Web Portal or from your smartphone or tablet.

To reset your registration:

From the Home screen, press **MENU**.

Select **Settings ▶ Reset**.

Select **Reset Registration**.

Confirm the reset by selecting **Yes**.

Re-registering the iGate™ Connect Thermostat

There are times when you may need to re-register your iGate™ Connect thermostat. For example, if you are a new homeowner who has just moved to a home with an existing iGate™ Connect thermostat. To re-register your iGate™ Connect thermostat, reset the registration and redo the registration process.

USING YOUR iGATE™ CONNECT THERMOSTAT

The bright, easy-to-read screen on your iGate™ Connect thermostat makes it simple to review and adjust the settings any time you want.

Adjusting the Temperature

You can easily adjust the temperature without changing the iGate™ Connect thermostat's programming by pressing the arrow keys when the Home screen is displayed.

- Press ▲ to increase the temperature set point by 1°F (0.5°C).
- Press ▼ to decrease the temperature set point by 1°F (0.5°C).
- If the iGate™ Connect thermostat is set to Auto mode, press ◀ to select the Cool setting.
- If the iGate™ Connect thermostat is set to Auto mode, press ▶ to select the Heat setting.

Once you've adjusted the temperature, the screen indicates that you are currently holding the set temperature rather than running a program.

The iGate™ Connect thermostat will hold the new temperature for the duration you specified in the Hold Action option during the initial setup (see Hold Action on page 19) or until you press **OK**.

If you are using Auto mode, note that there is a minimum difference allowed between heat and cool set temperatures. The system will prevent you from setting the temperatures

to within these limits. See the iGate™ Connect Thermostat Installation Manual for information about configuring the minimum temperature difference settings.

System Mode

To change system mode:

From the Home screen, press **MENU**.

Select **System Mode**.

Select your temperature mode: **Heat, Cool, Auto** or **Off**.

This menu sets your system to use heat, cool, or auto mode:

- **Cool** The system will turn on the air conditioner when the current temperature rises above the set temperature.
- **Heat** The system will turn on the heat when the current temperature drops below the set temperature.
- **Auto** The system is in Auto-changeover mode and will activate the heating or cooling systems to keep your home within the desired range of set temperatures.
- **Auxiliary Heat Only** The system will only use the auxiliary or back-up heat source to maintain the heat set point temperature (only appears if auxiliary heat is configured).
- **Off** The system is off and will only display the current temperature.

To change hot water mode settings:

From the Home screen, press **MENU**.

Select **Hot Water**.

Configure your hot water settings. (if applicable)

Hot Water Mode (If Applicable)

This menu allows you to turn on the hot water mode of your Trilogy® unit.

- **Hot Water Temperature** Displays the current hot water temperature.
- **Hot Water Setpoint** Establishes the set point for your hot water. Available range: 50°F to

135°F in 1°F increments. Default is 120°F.
WARNING Hot water setting above 120°F can cause severe burns.

- **Hot Water Mode** Determines the heat source for your hot water. Available selections: Off, Heat Pump, or Emergency Heat (iGate™ Smart Tank electric elements).
- **Hot Water Efficiency** When Hot Water Efficiency is enabled (**ON**) the AWS backup electric elements will operate when the connected heat pump is locked out or when the heat pump cannot keep up with the household hot water demand. When Hot Water Efficiency is disabled (**OFF**) the iGate Smart Tank electric elements will engage sooner when the connected heat pump is locked out or when the heat pump cannot keep up with the household hot water demand. Available selections: OFF or ON.

Fan

This menu displays the current fan setting:

- **On** Forces the fan to run continuously, regardless of the weekly schedule programming. The fan will also run if the system mode is Off.
- **Auto** Turns on the fan when the system is heating or cooling your home, or to satisfy the minimum fan “on” time.

When you switch between **Auto** and **ON** in fan control, the iGate™ Connect thermostat will prompt you with the following:

Hold 2 hours The fan will switch to this setting but revert back to weekly schedule after 2 hours.

To change fan settings:

From the Home screen, press **MENU**.

Select **Fan**.

Configure your fan settings.

Hold 4 hours The fan will switch to this setting but revert back to weekly schedule after 4 hours.

Indefinite The fan will switch to this setting and will only revert back if you do so manually .

Until Next Transition The fan will switch to this setting but will revert back when the program switches to the next period.

Update Schedule The fan will update the current schedule with this new fan setting.


After the fan mode is changed and you return to the home screen, the iGate™ Connect thermostat will indicate that it is in a Hold state. The temperature setting will also be set to Hold. Press **OK** to revert the fan mode back to the weekly schedule fan and temperature settings.

- **Minimum “On”Time** Sets a minimum amount of time per hour that the fan will run. This improves air circulation and results in a more consistent temperature than with the Auto setting while being more cost-effective than the On setting.

Weather Forecast

Displays the current outdoor temperature and weather conditions for your registered location.

Note that when you register, it's important to select your location accurately, as your iGate™ Connect thermostat will use your local weather data to optimize your heating and cooling. You must register your iGate™ Connect thermostat for this feature to operate.

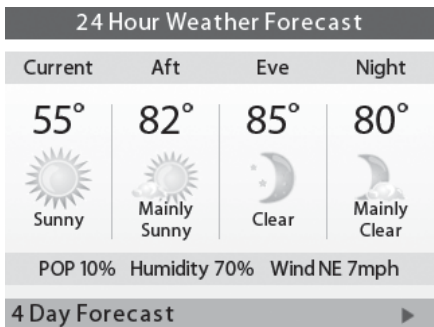

Weather Forecast screen

Resetting the Thermostat

At some point during the life of the iGate™ Connect thermostat you may want to quickly reconfigure it or restore it to the default state.

- **Reset Registration** Resets the connection between your iGate™ Connect thermostat and your personalized Web Portal. This terminates the link between the iGate™ Connect thermostat and your email address/password. *Note: After this reset, you must re-register your iGate™ Connect thermostat if you want to continue to use your Web Portal.*

To view the weather forecast:

From the Home screen, press **MENU**.

Select **Weather Forecast**.

Press **OK** to switch between the 4-day and 24-hour forecast.

To reset your iGate™ Connect thermostat:

From the Home screen, press **MENU**.


Select **Settings** ▶ **Reset**.

Choose the reset option that suits your needs.

- **Reset Preferences and Schedule** Resets all your preferences, reminders, alerts and programming back to the default state.
- **HVAC Equipment Settings** Resets the iGate™ Connect thermostat's equipment, threshold and sensor configuration.
- **Reset All Settings** Resets the iGate™ Connect thermostat back to its default factory settings and removes any registration information.
- **Reset Contractor Info** Resets any information about the Contractor who installed the iGate™ Connect thermostat.

Rebooting the iGate™ Connect Thermostat

You can reboot the iGate™ Connect thermostat by pressing the physical hardware reset button, located through an opening in the bottom left corner of the iGate™ Connect thermostat. Rebooting will not alter programming or configuration options.



Reset button

Cleaning the iGate™ Connect Thermostat

You can clean the iGate™ Connect thermostat's screen by spraying water or any mild, non-abrasive household cleaner on to a clean cloth. Wipe the surface of the screen with the dampened cloth.

Note: Do not spray any liquids directly onto your iGate™ Connect thermostat.

What To Do If You Move

If you're moving, log onto the Web Portal and select **Reset** under the **Settings** tab. Select **Reset Registration**. This terminates the association between your iGate™ Connect thermostat and your personalized Web Portal (you can also accomplish the same thing by choosing **Reset Registration** on the iGate™ Connect thermostat itself).

The new homeowners will need to register the iGate™ Connect thermostat and set up their own Web Portal.

CONFIGURING YOUR iGATE™ CONNECT THERMOSTAT

This section describes how configure the personal preferences, temperature settings, and operation of your iGate™ Connect thermostat.

There are three key steps:

- Configure Personal Preferences
- Set up Reminders and Alerts
- Create your Weekly Schedule

Note: *You can also configure your iGate™ Connect thermostat from your personalized Web Portal. Simply open a web browser, go to ClimateMaster.com/residential/owners-area/igate-connect and log in.*

Configuring Personal Preferences

To configure personal Preferences:

From the Home screen, press **MENU**.

Select **Settings** ► **Preferences**.

Adjust each option to your personal preferences.

The Preferences menu has settings for personalizing your iGate™ Connect thermostat.

Name

You can customize the name of your iGate™ Connect thermostat to suit your needs (i.e. Main Floor). This is useful if you have multiple systems or zones. You can view and edit your iGate™ Connect thermostat name in the About menu on your iGate™ Connect thermostat and also in your online Web Portal.

Temperature Display

Select **Temperature Display** to select Fahrenheit (°F) or Celsius (°C).

Date and Time

Select **Date & Time** to:

- Set the current date.
- Set the current time.
- Select a 12-hour or 24-hour time format.
- Select your time zone.
- Enable or disable daylight savings adjustments.

If you are connected to the Internet, the time and date are programmed automatically.

Brightness

The color screen has adjustable backlight brightness. You can control the intensity

when the screen is active (i.e., when you are pushing buttons) and when the display is in standby mode (idle screen).

Select **Brightness** to:

- Set the Active brightness intensity.
- Set the Standby (idle screen) brightness intensity.
- Set the minimum time the iGate™ Connect thermostat will stay in active brightness before switching to standby brightness.

Hold Action

Whenever you manually adjust the set temperature, the iGate™ Connect thermostat will indicate you are in a “Hold” mode. You can select how long the iGate™ Connect thermostat will hold the new temperature before reverting back to the regular program:

- **Hold 2 hours**
- **Hold 4 hours**
- **Until next transition** Thermostat will hold temperature until the next program period.
- **Indefinite** Thermostat will hold temperature until you press **OK**.
- **Update Schedule** When you adjust the set temperature, the system will update the temperature in the Weekly Schedule for the current period.
- **Ask Me** Every time you adjust the set temperature you will be asked which of the options you would like to choose.


Quick Save Settings

In Quick Save mode, your system will automatically increase (in cool mode) or decrease (in heat mode) the temperature set point by the pre-configured amount.

Quick Save mode can only be activated from the Web Portal or from the iGate™ smartphone/tablet application.

Access Control

You can protect your iGate™ Connect thermostat so that certain features will require the user to enter a 4-digit access code. Use the arrow keys to highlight a number and then press **OK**. When you are done, select **Save**. The access control will be required once the idle screen is displayed.

To disable this feature, delete the number by selecting  multiple times.

You can also configure the level of access control:

- **Restrict All Access** Unauthorized users will only be able to view the home screen and the weather information.
- **Restrict Details Access** The code is required to access the Details screen.
- **Restrict Program Access** The code is required to view and modify the iGate™ Connect thermostat's Weekly Schedule.
- **Restrict Vacation Access** The code is required to view and create a Vacation.
- **Restrict QuickSave** The code is required to exit QuickSave mode from the Web Portal.

In all cases, once the code is enabled, it will be required to access any of the list items in the

settings menu, with the exception of the About screen. Once a valid code has been entered on the iGate™ Connect thermostat, access to restricted features will be allowed until the iGate™ Connect thermostat backlight timer has expired.

Temperature Range

You can configure the iGate™ Connect thermostat so only a specific heat and/or cool set point range is permitted.

- **Heat Temp Range** Press ▲ or ▼ select the maximum heat set point then press **OK**. Users will not be able to set the iGate™ Connect thermostat to a temperature above this limit.
- **Cool Temp Range** Press ▲ or ▼ to select the minimum cool set point and then press **OK**. Users will not be able to set the iGate™ Connect thermostat to a temperature below this limit.

Recovery Options

Recovery options allow the iGate™ Connect thermostat to learn how your heating and cooling system works, taking into account infrastructure, weather and historical operating performance so that your home is a comfortable temperature as soon as you walk in the door.

- **Smart Recovery Heat** The iGate™ Connect thermostat will start heating at the optimum time to ensure the set point is reached at the programmed time.
- **Smart Recovery Cool** The iGate™ Connect thermostat will start cooling at the optimum time to ensure the set point is reached at the programmed time.

- **Random Start Heat** Programming a time in this section will produce a random delay when there is call for heat. In applications with multiple heating systems, this prevents all the systems from activating at the same time (thus creating a peak power demand). Press ▲ or ▼ to select a delay time and then press **OK**.
- **Random Start Cool** Programming a time in this section will produce a random delay when there is call for cooling. In applications with multiple cooling systems, this prevents all systems from activating at the same time, (thus creating a peak power demand). Press ▲ or ▼ to select a delay time and then press **OK**.

Utility CPP Setting

This section is only applicable if your utility company is running a Critical Peak Pricing program that you have agreed to be a part of. Contact your local electrical utility company for information about programs in your area.

CPP Response

Your utility may send voluntary events to your iGate™ Connect thermostat. You can choose to **Always Accept** these events. In which case, you would just be notified that an event is in progress. Or if you choose **Ask Me**, when the Utility issues an event, you will be asked if you want to participate.

If you do not acknowledge the event prior to the start, the system will default to yes.

Preferred Strategy

During a Critical Peak Pricing event the Utility may select an energy saving strategy, or allow you to use your preferred strategy. Select from

one of the options as your preferred energy saving strategy to be used during Critical Peak Pricing events.

- **Absolute Temperature** Set a specific heat and cool set point to be used when an event is initiated by the Utility company. If the set point at the time of the event is more favorable (lower in heat mode or higher in cool mode) than what you have programmed, the iGate™ Connect thermostat will use the more favorable set point for the duration of the event.
- **Relative Temperature** Program a temperature set back (heat) or set forward (cool) from your existing set point. For example, if you program a 4 °F set forward, and your current cool set point is 76 °F, during an event your iGate™ Connect thermostat set point will change to 80 °F until the event has expired.
- **System Off** If this option is selected, the iGate™ Connect thermostat will turn off heating and cooling for the duration of this event.
- **Duty Cycle** This option allows you to program the maximum amount of time the system will run during a 1 hour period. For example, if you select 30%, the air conditioner will run for a maximum of 18 (0.3 x 60) minutes regardless of whether the set point has been met. 0% essentially turns the system off, whereas 100% runs the system at full capacity.

To set up Reminders:

From the Home screen, press **MENU**.

Select **Reminders and Alerts**.

Adjust each option to your personal preferences.

Set Up Reminders and Alerts

Your iGate™ Connect thermostat can be programmed to remind you of required filter changes and regular maintenance.

If you are not sure about what equipment you have installed or whether you need to replace rather than clean your filters, please contact your heating and cooling contractor, or consult your original equipment manuals for the recommended maintenance procedures.

System Service

The System Service (Maintenance) alert is displayed on the screen when regularly scheduled maintenance is required. It will also show your contractor's contact information (if programmed by the contractor).

Select this item to turn the reminder on or off, show the date of the last service, and select a reminder interval.

Air Filter

Sets the reminder period for cleaning or replacing the air filter.

Select this item to turn the reminder on or off and set the reminder interval in run-time hours or calendar months. You can also check the date of the last filter change.

UV Lamp

If your system uses a UV lamp for air purification, the iGate™ Connect thermostat can remind you that it is time to clean or replace the lamp. Select this item to turn the reminder on or off and to set the reminder in calendar months. You can also check the date of the last lamp change.

Configure Alerts

The iGate™ Connect thermostat can generate alerts when the temperature in the home reaches a pre-programmed temperature. This protects your home from damage due to freezing or excessive heat.

If this alert has been set up, you will see the alert on the iGate™ Connect thermostat's screen. If you've configured your personal Web Portal, you will also receive an email alert.

Low Temp Alert

Select this item to set the temperature at which the iGate™ Connect thermostat will generate a Low Temperature alert. The range can be adjusted to:

- Off – no alert will be generated.
- Set temperature range of 35 to 68 °F (1.5 to 20 °C).

High Temp Alert

Select this item to set the temperature at which the iGate™ Connect thermostat will generate a High Temperature alert. The range can be adjusted to:

- Off – no alert will be generated.
- Set temperature range of 60 to 104 °F (15.5 to 40°C).

Aux Heat Runtime Alert (optional)

If you have a heat pump with auxiliary heat configuration, you can program the iGate™ Connect thermostat to generate an alert if the auxiliary heat runs for more than this programmed amount of time during a 24-hour period.

To set up Alerts:

From the Home screen, press **MENU**.

Select **Reminders and Alerts**.

Adjust each option to your personal preferences.

Aux Outdoor Temp Alert (optional)

If you have a heat pump with auxiliary heat configuration, you can also program the iGate™ Connect thermostat to generate an alert if the auxiliary heat is called for when the outdoor temperature exceeds this programmed set point. (This feature requires an Internet connection to function properly.)

Display Alerts on Thermostat

Select No if you do not want any of the alerts to be displayed on the screen. Alerts will continue to be displayed on the Web Portal and sent via email.

Enable Heating/Cooling Alerts

Select No if you do not want the iGate™ Connect thermostat to generate an alert if a system is not responding to a call for heat or cool. If disabled, these alerts will not be shown on the iGate™ Connect thermostat or Web Portal and no emails will be sent.

WiFi

To configure WiFi manually:

From the Home screen, press **MENU**.

Select **WiFi**.

Adjust the network options for your home network.

The iGate™ Connect thermostat supports WiFi 802.11 b/g/n. Use the Advanced Configuration option in the WiFi menu to configure your network parameters. Choose the network from the list or manually add a new one (i.e. if your network does not broadcast its SSID).

You will then be able to view and configure the following network parameters:

- DHCP (select Disabled to use a static IP Address; if unsure, leave DHCP Enabled)
- SSID

- Encryption (WEP, WEP128, WPA, or WPA2)
- Password (if encryption is used)
- WiFi Channel
- IP Address and IP Subnet
- Gateway
- Primary and Secondary DNS

If you need to specify your iGate™ Connect thermostat's MAC address in your router's configuration, you can obtain it from the **About** menu.

Creating Your Weekly Schedule

Your heating and cooling needs change depending on the time of day and day of the week. For example, if there's no one in the house during the workday you might want to let the temperature go up in the summer, to reduce energy used by the air conditioning system, and down in the winter, to reduce heating energy.

By default, the iGate™ Connect thermostat includes four configurable periods:

- **Awake** The start time of this period typically represents when you get up in the morning.
- **Work** This represents when you leave to go to work.
- **Home** This represents when you get home from work in the evening.


To view your weekly schedule:

From the Home screen, press **MENU**.

Select **Weekly Schedule**.

Your weekly schedule is shown on the screen.

- **Sleep** This represents is when you go to bed at night.

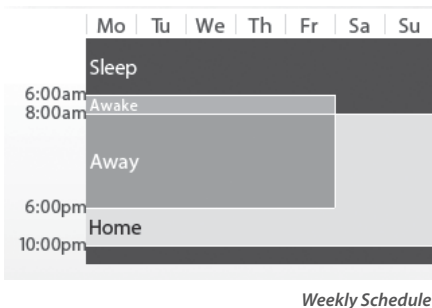

Your iGate™ Connect thermostat is intelligent and learns how your Trilogy® equipment performs. Intelligent algorithms combine weather data, your Trilogy® run times and occupancy schedules to optimize performance and maximize energy savings. This means you can be comfortable when you are home and save money when you are not.

If your schedule changes, you can quickly and easily update the iGate™ Connect thermostat settings on the device itself or online through your Web Portal.

Using the Weekly Schedule Editor

Monday			
	Time	Heat	Cool
Awake at	6:00 am	70°	78°
Away at	8:00 am	62°	85°
Home at	6:00 pm	70°	78°
Sleep at	10:00 pm	62°	82°

Add New

Save and Continue

Schedule Editor

The Weekly Schedule editor lets you to set specific times and temperature settings for each day of the week.

If your system is enabled for auto change-over mode, the heat and cool set temperatures will automatically be adjusted to ensure a minimum difference.

Adding New Periods

To accommodate for your varying schedule you can add additional program periods in your week. For example if you come home for lunch during the week or want different settings for the weekend, you would simply add one of the existing periods at the allocated time and day or create a completely new one.

Disable a Period

To disable a period entirely, select the period's **Time** and then select **Disable**.

To edit your weekly schedule:

Display your **Weekly Schedule**.

Press **OK**.

Select the **Day**.

Select the **Time, Heat or Cool Setting**.

Press **▲** or **▼** to adjust the the value. Press **◀** or **▶** to toggle between columns.

Press **OK**.

Select **Save and Continue**.

Select any other days of the week that will also use the new settings. Use the navigation keys to switch between days and press **OK** to select a day.

Select **Continue**. The new schedule is displayed on the screen.

To add a new period:

Display the schedule for a day and select **Add New**.

Select **Create New Item**.

Enter a name for the new period and select **Save**.

If your house is in-use during this period, select **Yes**; otherwise select **No**.

Select **Enable**.

Select the new time and press **OK**.

The new period is added.

To schedule a vacation:

From the Home screen, press **MENU**.

Select **Vacation**.

Select **Add Vacation**.

Enter a **Name**.

Enter the **Start** and **End** dates and times of your vacation.

Scheduling a Vacation

The iGate™ Connect thermostat's Vacation feature helps you conserve energy by changing your heating and cooling set points while you are away for extended periods of time. It also ensures your home is comfortable when you return.

A vacation event includes a name, start date and time, as well as the end date and time. You can enter any number of uniquely named vacations. Other vacation features to choose from include:

ClimateMaster optimize

Select **Yes** to have the iGate™ Connect thermostat automatically set your Heat Temperature, Cool Temperature, System Mode and Fan settings to maximize energy conservation while you are away.

Select **No** to manually configure Heat Temperature, Cool Temperature and Fan settings. These settings will be remembered the next time you create a vacation event.

Heat Temperature

Programs the set temperature when the system is in Heat mode. Set a lower temperature to save energy.

Cool Temperature

Programs the set temperature when the system is in Cool mode. Set a higher temperature to save energy. You can also choose to turn off your cooling system while you are away to save more energy.

Delete Vacation

You can delete individual or all vacation events:

- To remove an individual vacation event, display the details about the vacation event, then select **Delete Vacation ► Yes**.
- To remove all vacation events, display the **Vacation** menu and select **Delete All ► Yes**.

Fan

Toggles the fan setting between ON and Auto.

- **ON** The fan runs all the time regardless of programming or if there is a call for heat or cool. The fan will also run if the System Mode is OFF.
- **Auto** This option turns the fan on but only when the system is heating or cooling your home, or to satisfy the minimum fan run time as programmed.
- **Fan Min On Time** This feature allows you to determine a minimum time per hour that the fan will run. This improves air circulation and provides a more consistent temperature within the home. It is more cost-effective than choosing the ON fan setting.

In either mode, the iGate™ Connect thermostat will ensure that when your vacation ends, the iGate™ Connect thermostat will revert to the regular settings.

Note: If you were running your regular program prior to the start of your vacation, on your return, the iGate™ Connect thermostat will restore your home to those settings. If you were in Hold mode prior to the start of your vacation, the iGate™ Connect thermostat will restore the home to whatever the set temperature was just prior to your vacation.



UNDERSTANDING ALERTS

From time to time your ClimateMaster system will display an alert — a reminder to change the air filter, or perform regular maintenance, for example.

If you have connected your iGate™ Connect thermostat to the Internet, these alerts can also be sent to you via email.

When an alert displays, you can dismiss it or ask to be reminded later.

For example, if you receive an air filter alert and choose Remind me later, the alert will clear and display again 24 hours later. If you choose OK when the alert displays, it will reset the reminder.

List of Alerts

Your iGate™ Connect thermostat can generate the following alert messages (some alerts may not apply depending on your system.)

Air Filter	Air filter needs to be cleaned or changed.
UV Lamp	UV lamp needs to be changed.
Low Temp Alert	Temperature in the home is too low.
High Temp Alert	Temperature in the home is too high.
Heat Not Responding	The system has failed to heat the home.
Cool Not Responding	The system has failed to cool the home.
Maintenance Reminder	The system is due for regular maintenance.
Auxiliary Heat Run Time	Auxiliary heat source is running too often.
Auxiliary Outdoor Temperature	Your iGate™ Connect thermostat auxiliary heat has been called to run when the outdoor temperature exceeds the programmed set point.

End User Software License Agreement

The software for your thermostat device is provided by ClimateMaster, Inc. ("ClimateMaster") under license from ecobee, Inc., and your use is governed by the following terms:

Please read the following carefully, as this end user software license agreement ("EULA") is a legal agreement between ecobee Inc., having its place of business at 477 Richmond St West, Suite 210, Toronto, ON, M5V 3E7 Canada, ("ecobee") and you (either an individual or the entity that you represent and referred to in this agreement as "licensee"), The original purchaser of ClimateMaster product (The "product" or "products") embedded with ecobee proprietary software (the "software") concerning licensee's limited access to and use of the software. By using the product (including the software embedded in the product), you are indicating your acceptance of, and you agree to be bound by the terms and conditions of this EULA which shall govern your access and use of the software. If you do not agree with the terms and conditions of this EULA, your access to and use of the software will not be permitted and you may, within fourteen days of the date of your purchase if the product, return the software together with the product in its original packaging and sale condition to: (a) ClimateMaster if you have purchased the product directly from ClimateMaster or; (b) to a ClimateMaster authorized reseller or distributor if you have purchased the product from such entities, and ClimateMaster or its authorized reseller or distributor as applicable shall provide a full refund of the purchase price paid within fourteen days of its receipt of the return. In consideration of the license fees paid by LICENSEE as part of the purchase price of the product and the mutual covenants contained herein and for other good and valuable consideration, the receipt and sufficiency of which are hereby acknowledged, ecobee, ClimateMaster and LICENSEE agree as follows:

1. **Definitions:** For the purpose of this EULA, the following terms shall have the meanings hereinafter provided: "Web Portal" means the web site portal operated by ecobee to provide certain services and functionality to registered users of products. "Error" means any program defect, error, bug or other failure of all or part of the Software that results in the Software not conforming to, or performing in accordance with, its published specifications. "Software" means ecobee's computer software program, which enables data upload and download to and from the Web Portal using an product, including any Software Updates. "User Manual" means the ClimateMaster User Manual provided together with the Product and Software. "Software Updates" means updates or patches to the Software, including updates intended to correct Errors and which may include enhancements and/ore additional features to the Software, as may be provided or released by ecobee from time to time to all of its customers at no charge.
2. **Ownership of Software:** LICENSEE acknowledges and agrees that, save and except for the Software license explicitly granted by the EULA, all right, title and interest in and to the Software and the User Manual is the sole and exclusive property of ecobee

and/or its licensors), as the case may be. ecobee reserves all rights not expressly granted to LICENSEE hereunder, and for greater certainty, ecobee shall retain all intellectual property and other proprietary rights in and to the Software and the User Manual as provided by ecobee. Nothing in this EULA shall, or shall be deemed or construed to, assign, transfer or convey to LICENSEE any title, rights or interest in or to any intellectual property, including in or to the Software or User Manual, other than the licenses specifically and expressly granted herein.

3. Grant of Limited License: Upon LICENSEE's use of the Product (and corresponding acceptance of the terms and conditions of this EULA), ecobee hereby grants to LICENSEE a limited, nonexclusive, personal, perpetual, non-transferable and revocable license to use the Software embedded in the Product as and to the extent described in this EULA for as long as LICENSEE complies with the terms and condition of this EULA. ecobee reserves all rights not expressly granted to LICENSEE. For certainty, this EULA does not apply to or govern LICENSEE's use of or access to the Web Portal or the product, which are each governed by and subject to separate terms and conditions.
4. Permitted Use: Pursuant to the Software license granted to LICENSEE under this EULA, LICENSEE shall be permitted to: (a) use the Software embedded in the Product for the purposes of using the Product only as intended and contemplated by the User Manual, provided that the Software may only be used for its personal and private use in connection with the use of the Product; and (b) use the User Manual provided by ecobee solely as is necessary to operate and use the Software and product as and to the extent permitted thereunder and under this EULA.
5. License Transferable: This EULA shall be binding upon and shall ensure to the benefit of and be enforceable by each of the parties, their respective successors and permitted assigns. LICENSEE may assign this EULA without the prior consent of ecobee. ecobee may assign this EULA without the consent of LICENSEE at any time.
6. Copy Restrictions: Unauthorized copying or distribution of Software or the User Manual is expressly prohibited. LICENSEE may make a reasonable number of copies of the User Manual to the extent reasonably required for its use of the Software and Product as permitted by this EULA; provided that LICENSEE may not use the User Manual separately from the Product or Software or for any purpose other than as contemplated herein.
7. Use Restrictions: LICENSEE may not: (a) modify, adapt or otherwise change the Software or in any way remove the Software from the Product for any reason or use the Software separately from the Product for any reason or purpose; (b) to the maximum extent permitted to be restricted by applicable law, reverse engineer, decompile, disassemble, or otherwise in any manner deconstruct all or any part of the Software; (c) create derivative works based on the Software or the User Manual; (d) except as expressly permitted by the EULA, provide, disclose, sublicense, distribute, transfer, assign or otherwise permit any third party to access, use, read or otherwise gain access to the Software or User Manual (the Software and User Manual being the

- confidential information of ecobee); or (e) use Software to access or in conjunction with any other thermostat monitoring services or products of any ecobee competitor.
8. Support: ClimateMaster or its agents will provide technical support for the product. ecobee may in its discretion, without any obligation to do so and subject to the limitations of this EULA, provide LICENSEE with help-desk telephone support concerning LICENSEE's use of the SOFTWARE to the extent provided for in the Product Terms of Sale in connection with purchase and sale of the Product and the Terms of Service entered into by you and ecobee, if any, in connection with the thermostat monitoring and data management services provided by ecobee in connection with the Product. Refer to the Product Terms of Sale and/or the Terms of Service associated with the Product and related services for further details on Software and Product support.
 9. Relief: LICENSEE agrees that damages would not be an adequate remedy for any breach of this EULA affecting or related to a breach or misappropriation of ecobee' (or its or its third party licensors') intellectual property rights in and to the Software and User Manual. LICENSEE, and nothing in this EULA, shall interfere with, delay, obstruct, or prevent ecobee from taking, or require ecobee to take, any steps prior to taking action to seek an interim and interlocutory equitable remedy on notice or ex parte to enforce any provision herein to protect its rights concerning the Software or other intellectual or proprietary rights. LICENSEE agrees not to contest, object to, or otherwise oppose an application for equitable relief by ecobee in such circumstances and LICENSEE waives any and all immunities from any equitable relief to which it may be entitled. Any such relief or remedy shall not be exclusive, but shall be in addition to all other available legal or equitable remedies. LICENSEE agrees that the provisions of this Section are fair and reasonable and are necessary to protect ecobee' intellectual property rights.
 10. Termination: This EULA is effective until and unless terminated. Subject to Section 13, this EULA will terminate automatically if LICENSEE fails to comply with any provision of the License. If LICENSEE is a business entity or other entity, any failure to comply with the terms and condition of this EULA by any individual employed or engaged by such entity will be deemed a failure to comply by LICENSEE. Upon any termination, LICENSEE shall destroy all copies of Software and User Manual.
 11. Warranty: (a) ClimateMaster shall provide its standard Product and Software limited warranty statement ("Customer Warranty"), which equally applies to the Software embedded in the Product, and which is incorporated by reference herein, with the Product for your benefit only. In the event of an Error in connection with the Software, refer to the Customer Warranty and Terms of Sale provided with the Product for further detail. (b) EXCEPT FOR THE REPRESENTATIONS, WARRANTIES, AND COVENANTS EXPRESSLY CONTAINED IN THIS EULA, THE PRODUCT TERMS OF SALE AND THE PRODUCT WARRANTY, THE SOFTWARE AND SOFTWARE DOCUMENTATION AND ANY SUPPORT IS PROVIDED ON AN "AS IS" BASIS, AND THERE ARE NO OTHER REPRESENTATIONS, WARRANTIES, COVENANTS, OR CONDITIONS,

EXPRESS OR IMPLIED (INCLUDING ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE AND THOSE ARISING BY STATUTE OR OTHERWISE IN LAW OR FROM A COURSE OF DEALING OR USAGE OF TRADE), INCLUDING, BUT NOT LIMITED TO, NON-INFRINGEMENT, CORRECTNESS, FUNCTIONALITY, RELIABILITY, ACCURACY, CURRENTNESS, OPERATION, USE OR THE RESULTS OF THE USE BY LICENSEE, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE (OR THAT ALL ERRORS CAN OR WILL BE CORRECTED) OR THAT THE SOFTWARE OR SOFTWARE DOCUMENTATION WILL MEET LICENSEE'S REQUIREMENTS, ALL OF WHICH ARE EXPRESSLY DENIED AND DISCLAIMED TO THE MAXIMUM EXTENT PERMITTED BY LAW. SOME JURISDICTIONS DO NOT PERMIT LIMITATIONS ON OR EXCLUSIONS OF CERTAIN IMPLIED WARRANTIES, OR THE EXCLUSION OR LIMITATION OF CERTAIN DAMAGES; THEREFORE THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU IN CERTAIN CIRCUMSTANCES. ecobee DISCLAIMS AND SHALL HAVE NO LIABILITY TO LICENSEE FOR ANY AND ALL ACTS OF THIRD PARTIES. NO OTHER PERSON IS AUTHORIZED TO EXTEND, VARY OR TRANSFER ANY PROVIDED WARRANTY ON BEHALF OF ecobee. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE AND USE OF THE SOFTWARE, SOFTWARE DOCUMENTATION AND ANY PROVIDED SUPPORT IS ASSUMED BY LICENSEE.

12. Limitation: IN NO EVENT AND TO THE MAXIMUM EXTENT PERMITTED UNDER APPLICABLE LAW SHALL ECOBEE, ITS SHARE-HOLDERS, AFFILIATES, CONTRACTORS, SUPPLIERS AND AGENTS AND THEIR RESPECTIVE DIRECTORS, OFFICERS AND EMPLOYEES (COLLECTIVELY THE "ECOBEE PARTIES") BE LIABLE TO LICENSEE OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, EXEMPLARY, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (INCLUDING WITH RESPECT TO LOSS OF, OR DAMAGE TO, DATA OR COMPUTER SYSTEMS OR RELIANCE ON ANY DATA DERIVED FROM LICENSEE'S USE OF THE SOFTWARE, OR LOSS OF REVENUE OR PROFIT OR OTHER ECONOMIC LOSS) OF ANY KIND OR NATURE WHATSOEVER SUFFERED BY LICENSEE OR ANY THIRD PARTY HOWSOEVER CAUSED AND WHETHER RESULTING FROM THE USE OF OR INABILITY TO USE THE SOFTWARE OR OTHERWISE (INCLUDING AS A RESULT OF OR DUE TO USE OF OR RELIANCE ON THE SOFTWARE AND/OR Web Portal) AND REGARDLESS OF THE FORM OR CAUSE OF ACTION, EVEN IF SUCH DAMAGES ARE FORESEEABLE OR ecobee HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. ECOBEE PARTIES' TOTAL LIABILITY AND OBLIGATION TO LICENSEE, IN THE AGGREGATE FOR ANY AND ALL CLAIMS ARISING OUT OF OR IN ANY CONNECTION WITH THIS EULA, THE TERMS OF SALE IN CONNECTION WITH YOUR PURCHASE OF THE PRODUCT AND YOUR USE OF THE SOFTWARE AND PRODUCT, WITH RESPECT TO ANY EXPENSE, DAMAGE, LOSS, INJURY, OR LIABILITY OF ANY KIND, REGARDLESS OF THE FORM OF ACTION OR THEORY OF LIABILITY (INCLUDING FOR BREACH OF CONTRACT, TORT, NEGLIGENCE, BY STATUTE OR OTHERWISE) SHALL BE LIMITED TO THE ACTUAL DIRECT DAMAGES SUFFERED AND SHALL NOT EXCEED AN AMOUNT THAT IS EQUIVALENT TO THE PURCHASE PRICE OF THE product ACTUALLY PAID BY LICENSEE. THIS SECTION SHALL SURVIVE A FUNDAMENTAL BREACH OR BREACHES AND/OR FAILURE OF THE ESSENTIAL PURPOSE OF THE AGREEMENT.

13. Survival: The parties acknowledge and agree that the provisions of Sections 2, 6, 7, 9, 11(b), 12, 13, 14, 15, 16 and 17 shall survive any termination of this EULA for any reason.
14. English Language: The parties declare that they have required that this agreement and all documents related hereto, either present or future, be drawn up in the English language only. Les parties déclarent par les présentes qu'elles exigent que cette entente et tous les documents y afférents, soit pour le présent ou le futur, soient rédigés en langue anglaise seulement.
15. Jurisdiction: This EULA shall be exclusively governed by, construed and interpreted in accordance with the laws of the Province of Ontario, Canada. For the purpose of all legal proceedings this EULA shall be deemed to have been performed in the Province of Ontario, Canada and the parties expressly confirm that the law of the Province of Ontario is the proper law. If Customer is located in a jurisdiction other than Canada, the parties agree that neither the United Nations Convention of the International Sale of Goods or the (U.S.) Uniform Computer Information Transactions Act shall apply to this EULA. The parties irrevocably attorn to the nonexclusive jurisdiction of the Courts of the Province of Ontario in respect of all matters and disputes arising hereunder.
16. Export Law Assurances: LICENSEE acknowledges that the Software may be subject to export and import control laws, and agrees to comply fully with those laws in connection with the Software.
17. General Provisions: No delay or omission by ecobee to exercise any right or power it has under this EULA or to object to the failure of any covenant of LICENSEE to be performed in a timely and complete manner, shall impair any such right or power or be construed as a waiver of any succeeding breach or any other covenant. Any waivers by ecobee must be in writing and signed by an authorized representative of ecobee. If any provision of this EULA is held by a court of competent jurisdiction to be invalid or unenforceable in any respect, then the remaining provisions of this EULA, or the application of such provisions to persons or circumstances other than those as to which it is invalid or unenforceable shall not be affected thereby, and each such provision of this EULA shall be valid and enforceable to the extent granted by law. The EULA constitutes the entire agreement between the parties as it relates to the license and use of the Software and User Manual and the subject matter of this EULA and supersedes all prior or contemporaneous agreements, negotiations, representations and proposals, written or oral between ecobee and LICENSEE. The EULA may only be amended or supplemented by written agreement executed by each of the parties.

97B0117N01



©2014 ClimateMaster
24-hour information:
877-436-6263
climatemaster.com

7300 S.W. 44th Street
Oklahoma City, OK 73179
405-745-6000

EB-SmartSiUM-01-rev2

